

Two-way car alarm with remote control

KEETEC TS 8000



Contents

System description	4
Button Functions	5
Icons of LCD	6
Alarm Functions	7
Door lock(Arming)/Panic	Driver calling(Knock)
Disarm	Shock sensing
Door unlock(Disarming)	When input is triggered
Trunk unlock(Car finder)	Checking the vehicle status
Start Functions	9
Remote start triggering	
Reservation of stick shift vehicle (Manual process)	
Getting on the vehicle during remote start	
Reservation mode for vehicles with LPG (optional)	
Getting on the vehicle during LPG start	
Time remote start	
Vehicle type setting	
Turbo protection	
Interval remote start	
Valet mode	
Setting Mode	14
Button hold	Start time setting
Signal check	Timer function
Mute mode of transmitter	Siren ON/OFF
Alarm	Temperature check
Current time setting	LCD back light ON/OFF
Alarm time setting	Vibration mode
Convenient Functions	17
Aux-1 output	Convenience start
Aux-2 output	Cold & hot start
Smart access mode	
Code Learning	18
Transmitter code learning	Low battery indicator
RPS setup	19
Program Setting	20
Program setting	Program reset

■ System description

















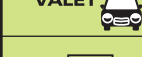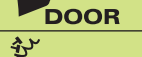



- KEETEC TS 8000 is car alarm with 2-way transmission assigned for vehicles with 12V power supply. The system senses doors, hood, trunk of vehicle. TS 8000 has a shock sensor and possibility for additional sensor connection. The system is protected by hopping code of second generation. The car alarm cut start of engine at violation of any sensed zone and triggers the alarm by sound and optical alerting. The vehicle status is possible to monitor on display of LCD transmitter with range to 2000m. If the vehicle is violated, the display informs violated zone by sound, optical and vibration alerting. The LCD transmitter controls also central lock and trunk and allows remote start of vehicle. KEETEC TS 8000 is applicable for installation to all type of vehicle (petrol, diesel, TURBO engine, LPG engine) with manual and automatic gear. The duration and the start time of remote start is possible set-up. The system has many other function written in this manual.

■ LCD transmitter description




- illuminated LCD display
- vehicle status and range display
- violated input display
- sound signalling (ON/OFF)
- vibration signalling (ON/OFF)
- time, alarm-clock, timer (ex. for parking)
- buttons blocking
- function SMART activation
- interior temperature of vehicle display
- remote start time display
- driver calling display
- valet mode display
- turbo protection display
- program menu
- system control
- battery in transmitter - 1,5V AAA


Operation		1times (one second)	2times (Double click)	Two seconds	Page	
Button No	Icon					
1		Arming / Disarming Lock / Unlock	Arming/Disarming (No chirp mode)	Panic mode	7	
2		Stick reservation	Remote start OFF Convenience start (IG ON)	Remote start ON	9,10,17	
3		Car finder (Arm mode)	Shock sensing OFF (Two stage sensing OFF)	Trunk unlock	7,8	
4		Vehicle status confirmation	Temperature check	Parking timer mode	8,16	
5	 LCD Lamp ON 1time	Continues Setting mode	2 seconds	HoL	Button hold ON	14
			4 seconds	Atb	Automatic buttons locking	
			6 seconds	SIG	Signal check ON	
			8 seconds	bur	Buzzer OFF	
			10 seconds	ALm	Alarm setting ON	
			12 seconds	CLOCK	Current time setting	15
			14 seconds	ALARM	Alarm time setting	
		16 seconds	START	Start time setting		
		3times (Program setting mode)	Button 4		Move to next menu	19
			Button 3		Move to next function	
Button 2			Setup OFF or selection			
Button 1			Setup ON or selection			
Button 5			Setup finish			
1+2	+ 2 seconds	Vehicle selection mode (within 30 sec from turn ignition OFF)			12	
		Button 1	Normal vehicles	Standby time setting for 4 seconds		
		Button 2	Diesel vehicles	Standby time setting for 8 seconds		
		Button 3	Special vehicles	Standby time setting for 8 seconds Re-Lock setting after remote start		
		Button 4	LPG	LPG function setting(30seconds delay)		
1+4	+ (*)	2 seconds	Repeat start operation (8times / 24 hours)	RPM setting (in valet mode)	13	
5+3	+	2 seconds	LCD back light (ON / OFF)		16	
5+4	+	2 seconds	Vibration mode (ON / OFF)			
5->1			Alarm of siren at shock sensor violation (ON/OFF)			
5->3			AUX-1output (One way transmitter: Press button 4* for 2 seconds.)		17	
5->4			AUX-2 output (One way transmitter: Press button for 4 * for 2 times)		17	
5->2			Time remote start (ON/OFF)		12	
1+3	+	2seconds	Learning (1-way trasmitter) / Factory setting		20	

	Door lock(Arming) Signal check ON	CLOCK	Adjustment mode of current time
	Door unlock (Disarming)	ALARM	Adjustment mode of alarm time
	Remote start	START	Adjustment mode of automatic start time
	Trunk unlock		Valet mode
	Door open		Battery status
	Shock sensing		Blink icon
	Call indicator (Knock)		Button hold Function mode
	Wake-up alarm setting ON		Time, Temperature, Program menu
	Automatic start setting ON		Timer mode
	Siren OFF (When shock sensing)		RF transmit
	Buzzer OFF		Progressing time of the remote start
ACCESS	Smart access ON	AUX1	AUX-1
TURBO	Turbo ON	AUX2	AUX-2
TEMP	Temperature Start ON	°C	Temperature
ERR	Signal error		Vibration mode ON


Door lock(Arming) / Panic

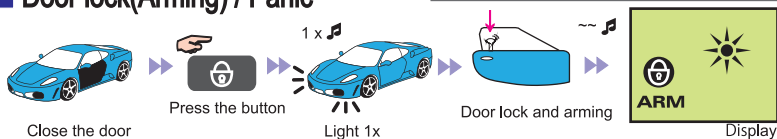

- Delay of input activation (doors contacts, ignition) is Setting in range 5-45 sec. of system activation (function 3-8). Default delay: 5 sec.
If doors are opened, starts sound alerting after expiry of delay.

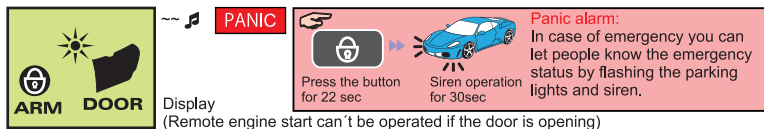

Door unlock (Disarming)

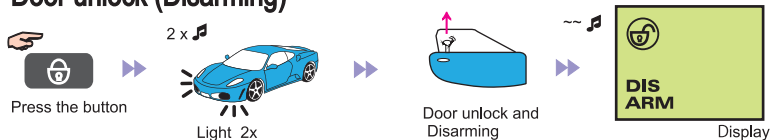

- If you don't open the door within 30sec, after the disarming, the vehicle enters alarm mode again with the door is automatically locked.
- **Mute arm / disarm:** Press 2x button: (within 1 sec.).

Trunk unlock (Car finder)




- The shock sensor will turn OFF after trunk open by transmitter (when system is armed). The shock sensor will turn ON after trunk closing.
- **Car finder function:** If you press the trunk button for 1sec in arm mode, you can confirm current status of vehicle with "Beep" sound and light.

Car alarm functions

Driver calling(Knock)



Knock the driver call sensor ,
on the windshield of the vehicle

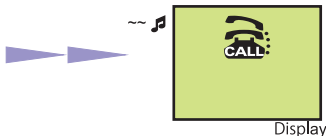

Display

- After arm delay time(5 - 45 seconds), this function is operated after 20 seconds
Driver calling is stopped at the remote engine start.

Shock sensing



Shock sensing






The siren output for 30 sec
(weak shock:Warning)



Display



Press the button
to stop the siren

- After arm delay time (5 - 45), this function is operated after 20 seconds.
Arm delay time default:5 seconds, See the table 3-8.)
- Shock sensing OFF: If you want shock sensor is OFF(1time) you need to press the trunk button  2times in arm mode.
- weak shocks sensing OFF: press 2x button 
strong shocks sensing OFF: press 2x button again 

Shock sensing is stopped at the remote engine start.

When input is triggered



When the input is
triggered in the
arming mode



The siren output
for 30sec



Door trigger



Trunk trigger



Hood, brake, Ig trigger

- The alarm repeated 3x at each
inputs violation.



Press the button
to stop the siren

Checking the vehicle status



Press the
button



 
LCD back light
ON

Current status of vehicle
is marked by icon



- ERR** This icon is turned on when
it can't receive reception after operate transmitter.

Manual reservation mode (function 1-5 - OFF)



Keep stick shift on neutral position after driving



Press the button



Remove the ignition key



Open and close the door (The engine will remain be running)

 


Vehicle prepared for remote start.



System arms

1 x



Door lock and arming



Press the button

Reservation mode will OFF automatically:

- If the key is moved out of the ignition and any doors are opened.
- If the door will open before reservation mode finish reservation mode will cancel of safety reasons).

Getting on the vehicle during remote start



A remote start is operating



Press the button




Door unlock and Disarming



Getting on the vehicle (The engine will remain be running for 1 minutes)

Notice


1. You must notice not to turn the ignition key to an "ST" location in getting on the vehicle during remote start
2. Beware that start turn off within 1min if you not turn the ignition key to an "ON" but turn to an "ACC"

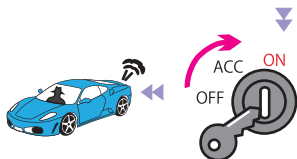


Turn on the ignition key within 1min to an "ON" location

- **Engine start safety mode:** If you press the brake pedal at the remote start, engine start program will be completed with engine turn off. (This function will be only operated in case brake sensing wire is connected.)

Start Functions

- Light blink for 15 minutes after remote start and the engine start turn off automatically after the 15minutes. (Progress time is marked to icon.) The buzzer sound is outputted from the transmitter when the remaining start is 5min. (If you want change start run time, see 3-1 of the program menu.)
- **Engine start turn OFF:** Press the button twice 
The start turn OFF with 2 chirps in the vehicle.
- Start condition: All sensing (Door, trunk, brake, hood) must be normally operated. If start isn't operated at once, starting repeatedly your car 4times by increase each 0.3 seconds.

Remote start triggering

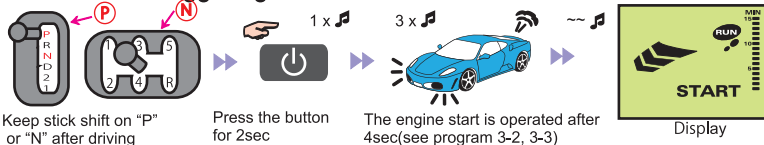


Reservation mode for vehicles with manual gear

Before remote start, the reservation mode is necessary to trigger in vehicles with manual gear. The vehicle is protected before engine start with speed.


- Automatic reservation mode: start allways at engine OFF
- Manual reservation mode: reservation mode setting

Automatic reservation mode (function 1-5 - ON)

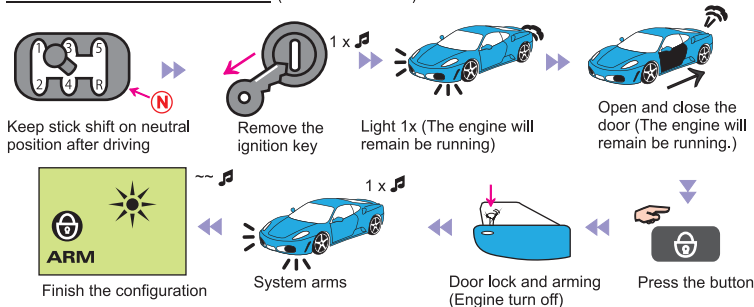

Start reservation of the LPG vehicle (Optional)

- In Summer: The reservation is the same as normal vehicle kinds's
- In winter: Remaining gas in gas line is frozen if the temperature falls below the zero. For prevention it, you had better do as follows.
(This function is operated when you install LPG gas velb ON/OFF relay.)

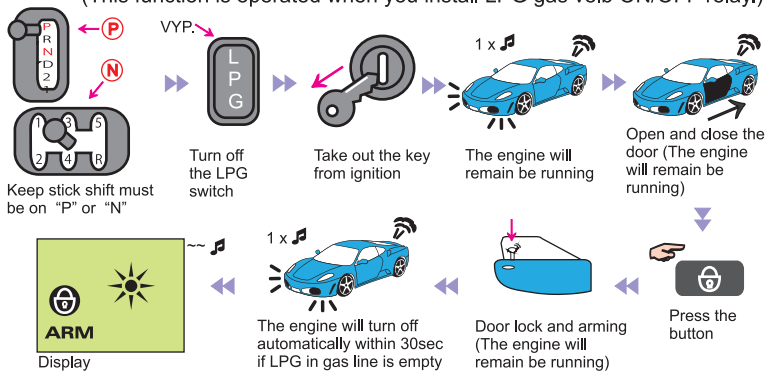

Getting on the vehicle during LPG start



 
Notice

1. You must notice not to turn the ignition key to an "ST" location in getting on the vehicle during remote start
2. Beware that engine start turn off within 1min if you not turn the ignitionkey to an "ON" but turn to an "ACC"




- **Engine start safety mode:** If you press the brake pedal at the remote start, engine start program will be completed with engine turn off.
(This function will be only operated in case brake sensing wire is connected)

Time reservation start setting



 Keep stick shift on "P" or "N" after driving



Open and close the door



 
Press the button



Door lock and arming



Press the button




Time reservation start setting



Press the button

- Use the function after start time setting (See 15 page start time setting). This function is operated only one time after the setting for the safety. It is convenient if you use in the situation which remote control isn't operated.)
- In this case of the stick vehicle, you can setting only after reservation.

- Icon  turn ON, if automatic start is setting.

Vehicle selection mode




Ignition key OFF



Press the door and start button simultaneously for 2sec within 30sec after ignition off




Enter: to the vehicle kinds selection mode

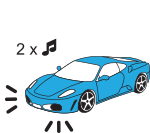

The setting is finished if the ignition key ON




Petrol engine 1 x 
- remote start delay: 4 sec




Diesel engine 2 x 
remote start delay: 8 sec



Others 3 x 
- remote start delay: 8 sec
- Doors locking after remote start



LPG 4 x 
- Delay at reservation mode activation: 30 sec

Auto turbo function



Ignition key OFF



Open and close the door



Press the button



Display


- This function is assigned for vehicles with turbo engine. Turbo protection before heating and next damage – the engine stays run and after arming turbo will cooled.

- Function ON is displayed by icon

TURBO

Duration setting of engine run: 1-10 minutes, program menu 3-7

Attention: If the system is controlled by original transmitter of vehicle then arming is not possible during engine run (for turbo protection).

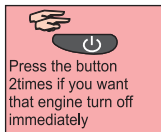

The engine turn off after 2mins

Repeat start operation

This function is operated in arm mode



Press the door and M button simultaneously for 2sec in arm mode



Auto start setting

If this function is set, start will automatically operated total 8times for 24hours. And set function will cancel at the disarm.

- This function is operated each every 3hours between 24hours. Engine run duration is depend on function setting 3-1.

Valet mode (Emergency deactivation)



Ignition ON



Press and hold the button for more than 5sec
Valet ON/OFF

See Digital code valet mode of 19 page



Display

The function is normally functioned if you repeat again. (Valet icon is off on the display)

ON: 1 x 🎵
OFF: 2 x 🎵

- In the case of the valet mode, you can operate only door lock/ unlock and trunk open by transmitter.
- Use this function when you leave your car to other person that don't know how to use this transmitter.
- Code valet mode using, see page 23.
- This process is used also for emergency system deactivation.

Setting mode

■ Button hold



Press the button for 1x
2 sec Remove your hand
when *Hol* is marked

- If the button hold mode is ON, **F** is displayed and user can operate only **F** or **M** button
- If you want to cancel it, press the **F** button for 2sec one more time (**F** is OFF)

■ Automatic buttons locking



Press the button for 1x
4 sec Remove your hand
when *Atb* is marked

- If the the automatic buttons locking is ON, the display shows icon **F** and active buttons are only **F** and **M**
- If would you like OFF blocking, press button **F** again over 4 sec.

■ Signal check



Press the button for 2x
6 sec Remove your hand
when *Si E* is marked

- If the signal check mode is ON, ● is displayed and the transmitter check the communication condition by commuting with main control unit each every 60 min.
- If you want to cancel it press the **F** button for 6 sec. (● is off).
- If the signal can not receive, the **ERR** icon will be displayed with buzzer sound.

■ Buzzer ON/OFF



Press the button for 3x
8 sec Remove your hand
when *bur* is marked

- If the buzzer is OFF, (BZ) is displayed and the transmitter do not output any sound.
- Mute mode is signaled on the display by icon (BZ)
- If you want to cancel it, press the **F** button for 8 sec. ((BZ) is OFF)

■ Alarm ON/OFF




Press the button for 4x
10 sec Remove your hand
when *ALm* is marked


- If the alarm is ON, (ALARM) is displayed and the melody is outputted at setting time.
- If you want to cancel it, press the **F** button for 10 sec ((ALARM) is OFF)


- Transmitter will return automatically to current time if you don't press the button for 10sec after setting mode.

Current time setting

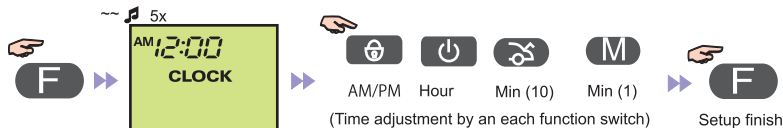


Alarm time setting

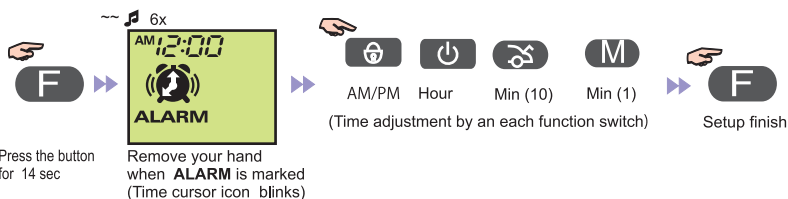

- Setting time is inputted in memory.
- The icon  is marked in transmitter when alarm is "ON". (page 14).

ALARM


Start time setting

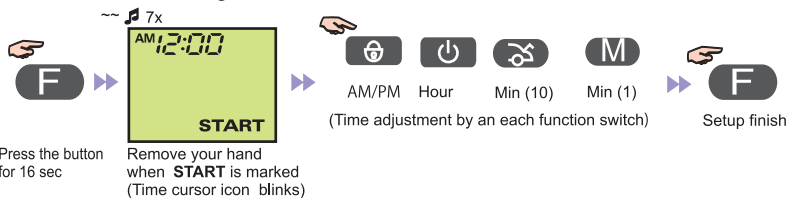

- Set up time to need time reservation start (Setting time will memory in the IC.).
- Set up by the transmitter when you need the time reservation start (page 12).

Setting Mode

Timer function

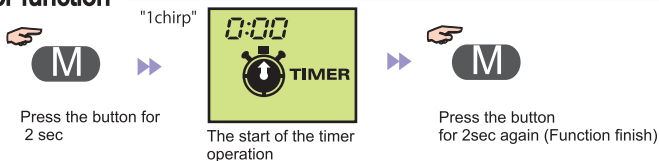


- This function is convenient when confirmation of the parking time and driving time. (The timer is marked 12hours to minute).

Siren (ON/OFF)



- When turned siren off, sound of the shock sensor is only stopped (The state is displayed to the LCD 2-way transmitter).


Temperature check

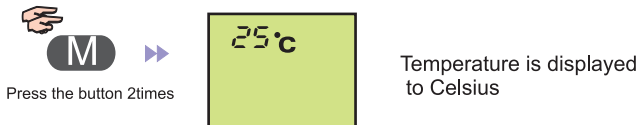

LCD Lamp ON/OFF



Vibration mode

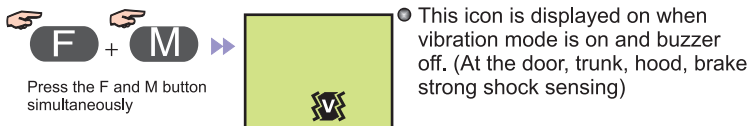

Aux-1 output

AUX-1 remote controlled additional output, can be used for control of equipments in vehicle (independent car heater...)



Activation (deactivation)



This icon is turned on when you operate AUX1 output.

AUX-1 will be outputted for 1sec. If you want to output time, change to 3-5 of the program menu.

One way transmitter:
Press button (✳) for 2 sec.

Aux-2 output

AUX-2 remote controlled additional output, can be used for control of equipments in vehicle (independent car heater...)



Activation (deactivation)



This icon is turned on when you operate AUX2 output.

AUX-2 will be outputted for 1sec. If you want to output time, change to 3-6 of the program menu.

One way transmitter:
Press button (✳) for 2times

SMART acces mode

- SMART function provides automatic arming in move away from vehicle and disarming come near to vehicle (function ON/OFF - program menu 4-6)

If you use this function, the transmitter battery life will be short.



Convenience start



Step on the brake and press the button 2times


- Comfort start is possible ON, when engine run.
- Comfort start is possible ON, when engine run. It is used when you need keep engine run after locking and arming (engine run duration is depended on function setting in program menu 3-1).
- You can use the comfort start, when you want go away from car on short time and you don't want engine turn OFF.

Cold & Hot start



- Automatic vehicle start at temperature decrease under -20°C or increase $+50^{\circ}\text{C}$. Minimal temperature is possible to set from -4° to -24°C (function 3-4).
- Activate this function in program menu 1-7.


Transmitter code learning

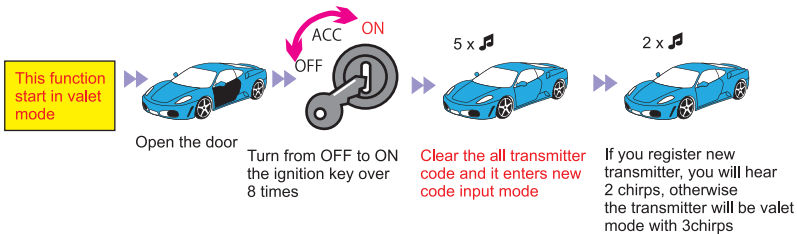

- This function is used when you lose transmitter or break down. You can use this function though siren is continually operated.
- The transmitter input is possible to each maximum 2pcs both one way and two way transmitter.

Low battery indicator

- If the operation range of transmitter is shortened or the buzzer sounding was lower than normal, please replace the battery to new one.
- You must adjust current time again after battery interchange.
- The alkaline battery life is 2-3 months and exchange the battery at once if the icon blinks.

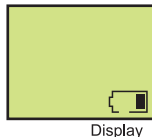

1-Way transmitter description



- system control
- system setting
- battery in transmitter - 2x CR 2016, 3V

(transmitter is not included!)

■ RPS module



Sensitivity setting of RPS module

RPS module button

Operation

1) Arming and locking by RPS module

1. Press button of RPS module 1x. LED indicator will light up and the display is rotated fast (this function is maintained for 30 sec.)

If you will press button within 30 sec., process is canceled.

2. Knock on window (on RPS module) 5x within 30 sec.

If all doors are closed, the vehicle will arm and lock.

2) Disarming and unlocking by RPS module

1. Knock on window (on RPS module) 5x within 30 sec.

(You will activate function „driver calling“ by the first knock).

2. The display will show digits 0 - 9, rotation in 2 sec. When will display the first digit of your code, knock on module. The setting is accepted by flash 5x of this digit. The display will start rotate digits 0-9 again.

3. Set all 4 digits of code according to step 2. If the code is taken correctly the car alarm is disarmed and doors unlocked.

ATTENTION: If you will set incorrect code 5x (during 1 hour), The RPS module displays "U" and all functions of RPS module are deactivated for 1 hour. The functions will retrieve by pressing of button.



3) Security code change

1. Press button of RPS module 20x. LED indicator will flash 2x.

2. Knock on window (on RPS module) 5x within 30 sec.

3. The display will show digits 0 - 9, rotation in 2 sec. When will display the first digit of your code, knock on module. The setting is accepted by flash 5x of this digit. The display will start rotate digits 0-9 again.



4. Set all 4 digits of code according to step 3. After last digit setting is a new code saved. If you would like change the code, repeat steps 1-4.

ATTENTION: The security code sets driver of vehicle. (default security code is "1234".)



Program Setting




Program reset

- **Program reset of the main control unit:** If you press  and  button simultaneously for 2 seconds within 30sec after ignition OFF at the valet mode, all program will default setting
- **Program reset of the LCD transmitter:** If you reset main control unit, you must reset of the transmitter. Put battery in with press M button after remove the battery of the transmitter and then all program of the transmitter will default setting.



Program setting

- Program setting method is different according to transmitter. Two-way and way). Transmitter must be disarm at the program setting.
- **LCD 2-WAY TRANSMITTER**



- Step 1: Press the **F** button 3x
- Step 2: You can change to menu of the P-1, P-2, P-3, P-4 by press the **M** button.
- Step 3: Choose the function you want by press the trunk button 
- Step 4: Choose the program state by press the button 1 (ON)  or button 2 (OFF) 
- Step 5: Function you choose will be transmit a main and setting is completed by press the **F** button.

- **ONE-WAY TRANSMITTER**

One way transmitter can be change only in P-1 and P-2 of the program menu. Program menu step is marked by chirp sound (ex: Menu 1-1 = 1x  1-2 = 2x )

Step 1




Ignition key ON

Step 2



Press the 1 and 3 button simultaneously for 3sec within 30sec after ignition ON

Step 3

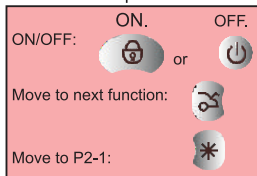

Step 4



The setting is completed if the ignition key OFF or turn off automatically after 5sec.

Program. menu	LCD Display	P-1 Remote start	Factory default	Optional
			Press button 1 or 2	
1-1	tur	Auto turbo protection	OFF	ON
1-2	StL	Door re-lock after remote start	OFF	ON
1-3	ACC	Trunk output change	OFF	ON
1-4	LPG	LPG reservation mode	OFF	ON
1-5	Atr	Auto reservation mode	ON	OFF
1-6	Het	Glow plug sensing at remote start	OFF	ON
1-7	tEm	Cold & Hot start	OFF	ON
1-8	IGt	Output "ignition 2" at the disarm	ON	OFF

Program. menu	LCD Display	P-2 Basic function	Factory default	Optional
			Press button 1 or 2	
2-1	CCH	Digital code valet mode	OFF	ON
2-2	IGL	Ignition lock/unlock	OFF	ON
2-3	PSA	Passive arming	OFF	ON
2-4	PSL	Passive lock	OFF	ON
2-5	LdA	Last door arming	OFF	ON
2-6	CHP	Chirp sound	ON	OFF
2-7	dUP	Double unlocking pulse	OFF	ON
2-8	dLP	Double locking impulse	OFF	ON

Program. menu	LCD Display	P-3 Timing settings	Factory default	Optional
			Press button 1 or 2	
3-1	Stt	Run time for remote start	2 10 15 25 35 45 (Minutes)	
3-2	Std	Remote start delay	4 8 12 15 18 20 (Sec.)	
3-3	Sto	Start impulse time	0.4 0.5 0.7 1.0 1.4 2.0 (sec.)	
3-4	CSt	Cold start temperature settings	-4 -8 -12 -16 -20 -24 (°C)	
3-5	Au1	Aux 1 output (LCH=Continue)	1 5 10 20 40 LCH (sec.)	
3-6	Au2	Aux 2 output (LCH=Continue)	1 5 10 20 40 LCH (sec.)	
3-7	ttt	Turbo time setting	1 2 3 5 8 10 (Minutes)	
3-8	Amd	Arm delay time setting	5 10 15 25 35 45 (sec.)	

Program. menu	LCD Display	P-4 Advanced functions	Factory default	Optional
			Press button 1 or 2	
4-1	SPo	Siren pulse output	OFF	ON
4-2	AEd	Automatic engine disable	OFF	ON
4-3	Lot	Unlock pulse	0,5 sec.	3,5 sec.
4-4	BPs	Arm reminder	OFF	ON
4-5	dom	Dome light is changed to armed output	OFF	ON
4-6	SAC	SMART acces mode ON/OFF	OFF	ON
4-7	CAS	Locking pulse	as unlock	20 sec.
4-8	Acd	Arm cancel mode at door open	OFF	ON

■ Program menu (P-1) - remote start

● 1-1 Auto turbo protection

If this function is ON, the function maintains engine ON after the door is locked. The turbo time is possible to change at program menu 3-7.

● 1-2 Door re-Lock after (installation only)

If this function is ON, The car alarm will lock doors automatically after remote start ending. This function is necessary to activate at vehicles, where the central lock wil unlock after turn ignition OFF.

● 1-3 Trunk output change (installation only)

If this function is ON, (+) will always output at the remote start (orange wire NR.3, connector CN2).

● 1-4 LPG reservation mode (optional)

If this function is ON, the engine will turn OFF automatically within 30 sec., if LPG in gas line is empty when the engine turn OFF. (This function is operated when you install LPG gas valve ON/OFF relay).

● 1-5 Auto reservation mode

If this function is ON, the reservation mode for remote start run always after turn ignition OFF (The engine stays ON till last door closing - max. 2 min.).

If this function is OFF, the reservation mode is possible a manual activation (see user manual - reservation mode for vehicle with manual gear).

● 1-6 Glow plug sensing at remote start (installation only)

If this function is ON, starter motor is operated after glow plug is OFF at the remote start. For this function is necessary to connect violet wire nr. 11 (connector CN5).

● 1-7 Cold & Hot start

If this function is ON, engine automatically start if temperature become under - 20° C or more then +50°C at the arm mode. The cold start temperature is possible set-up from -4 to -24°C (program menu 3-4). The engine ON duration is depend of function setting 3-1. This function is automatically OFF after total 8x operation.

- **1-8 Output “IGNITION 2” at the disarm** (installation only)

If this function is OFF, output “Ignition 2” is OFF at the disarm during remote start.

■ Program menu (P-2) - Basic functions

- **2-1 Digital code valet mode**

If this function is OFF, the valet mode is operated to ON/OFF if you press the valet button for 5 seconds at the ignition key ON.

If this function is ON, set the security code at valet mode activation.

Digital code valet mode activation:



1. Press the switch for 5 seconds when the digital control module is standby mode, and then LED blinks one time and the display segment is rotated fast. (This function is maintained for 30 seconds.)
2. Knock the sensor more than 5 times after get off the car within 30 seconds, then the digital code start count. (If you press the switch again within 30 seconds LED blinks 2 times and digital valet function is canceled).
3. During the numbers automatically count with delay each 2 seconds from 0 to 9, knock the sensor at the registered CODE. Then selected number blinks 5 times and it automatically repeat next number from “0”.
4. Select the remainder 3 CODES as upper STEP 3. If you select all CODES in order, valet mode is ON. If you want to cancel the valet mode, press the valet button for 5 seconds at the ignition key ON.

- **2-2 Ignition lock/unlock**

When turned ON, the doors will be locked when step on brake after the ignition is turned ON. The doors will be unlocked when the ignition is turned OFF. Getting on the vehicle during remote start: Door is locked when ignition key ON and then step on the brake.

- **2-3 Passive arming**

When turned ON, the system will arm automatically after 30seconds if the ignition key is OFF and door open/close.

- **2-4 Passive lock**

When turned ON: When the system is arm by passive arming, door lock will be automatically operated.

- **2-5 Last door arming**

When turned ON, if all door is closed at the disarm, door lock will be operated with arm after 30 seconds.

● 2-6 Chirp sound

In the default setting, siren of the vehicle will output chirp sound when you operate transmitter.

● 2-7 Double unlocking pulse (installation only)

If this function is ON, each door unlock = 2 impulses. The function is activated, when unlock impulse is setting on 0,5 sec. (program menu 4-3).

● 2-8 Double locking pulse (installation only)

If this function is ON, each door lock = 2 impulses. The function is activated, when unlock impulse is setting on 0,5 sec. (program menu 4-3). If locking pulse is setting in 20 sec., the first impulse is 0,5 sec and the second is 20 sec.

■ Program menu (P-3) - Timing settings

● 3-1 Run time for remote start

This function adjusts run time of the vehicle at remote start, cold start and time reservation time.

● 3-2 Remote start delay

This function adjusts delay at remote start, delay time from turn ignition ON to engine start.

● 3-3 Start impulse time (installation only)

Time setting of start impulse (at remote start by tach or noise sensing).

● 3-4 Cold start temperature settings

Minimal temperature setting for start of Cold & Hot program.
The function Cold & Hot start must be ON (1-7).

● 3-5 Aux 1 output (installation only)

Duration of Aux1 output setting. If CLH is adjusted, Aux1 output is constant (the output will be activated till disarm by transmitter).

● 3-6 Aux 2 output (installation only)

Duration of Aux1 output setting. If CLH is adjusted, Aux1 output is constant (the output will be activated till disarm by transmitter).

● 3-7 Turbo time setting

Turbo time setting for auto turbo timer programm (1-1). Default setting is 2 min.

- **3-8 Arm delay time setting**

Arm delay time delay of sensing for doors, trunk, hood and ignition.
Shock sensor will work 20 sec. after delay time.

■ Program menu (P-4) - Advanced functions

- **4-1 Siren pulse output**

In the default setting, siren will be continually outputted for 30 seconds when alarm is operated. When turned ON : Siren will be outputted to pulse

- **4-2 Automatic pulse disable**

When turned ON, starter kill will be automatically outputted 30 seconds after ignition OFF with LED blink slowly.

- **4-3 Unlock pulse (installation only)**

If this function is ON, unlocking impulse length is 3,5s. If this function is OFF, unlocking impulse length is 0,5s.

- **4-4 Arm reminder**

If this function is ON, the car alarm will sound 2x, after each open and close door over 10 sec., it reminds that is OFF. If the function 2-3 or 2-5 is ON, The reminder doesn't work.

- **4-5 Dome light is changed to armed output (installation only)**

If this function is ON and car alarm is armed, output for dome light is turned ON constantly (-) (black wire nr.2, connector CN5).

- **4-6 SMART access mode ON/OFF**

When turned ON, LCD display ACCESS icon. And the main control unit sense the transmitter when transmitter is near by vehicle, the system will be automatically disarm (Unlock). If the transmitter is far from vehicle, the system will be arm. If you use this function, the transmitter battery life will be short.

- **4-7 Locking pulse**

If this function is ON, locking impulse length is 20 sec. If the function is OFF, locking impulse is the same as unlocking impulse.

- **4-8 Arm cancel mode at door open**

When turned ON, if the door is open, arm is not operated by transmitter. In this case, you can operate arm after closing the door.